





LEARNING NEW TRANSMITTERS - 3 - 06 button type

1. Press down the programming switch SW1 on the Decoder board (see below) until the red LEARN LED lights. This is immediately above the red PWR light which should be constantly lit.
2. The LEARN LED will stay lit.
3. Depress the  transmitter key once. The Decoder board LED will go out.
4. Press the  transmitter button again. The LED will flash rapidly for about 5 seconds and then go out.
5. The transmitter will now operate the system as per the operating instructions.

Note:
To erase all transmitters from memory press programming button and hold for 10 seconds. The LED will light continuously for a further 10 secs. All transmitters will have been erased from the decoder's memory.

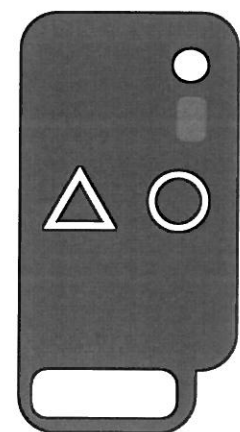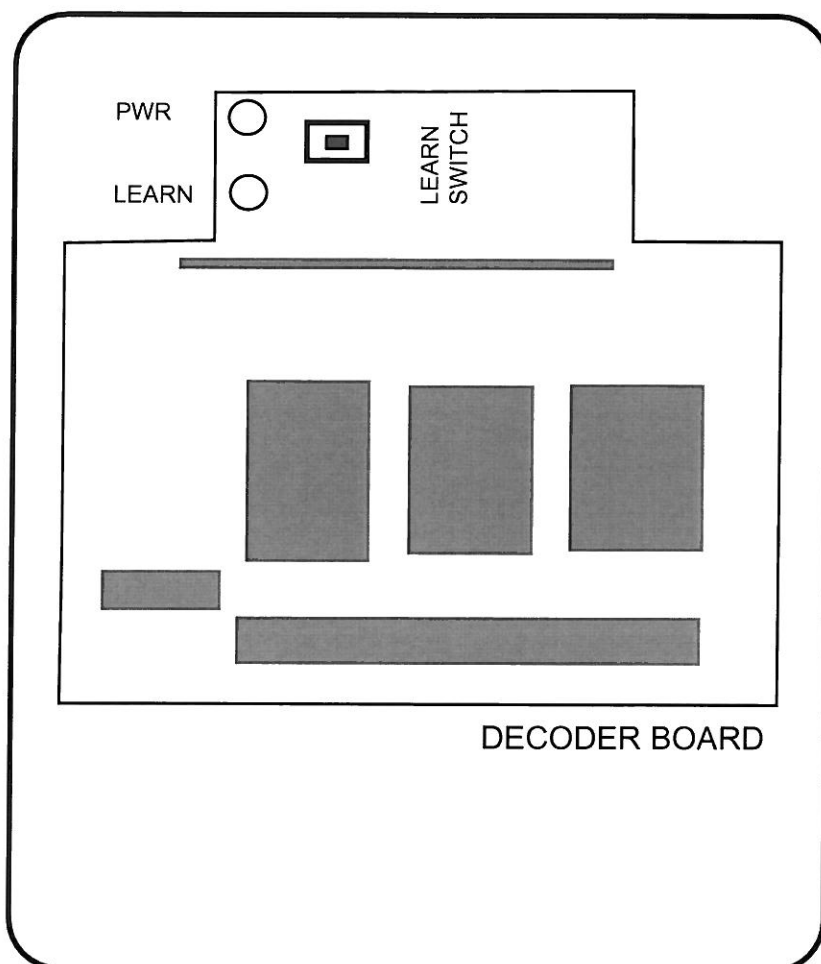

AM-110C3-433