


Light commercial Leading Edge DIY Instructions



Lay the leading edge out aligning symmetrically with the front end of the cover. Trim the ends back to cover width. Attach the leading edge mesh to the cover with nuts and bolts as shown in the drawings below.

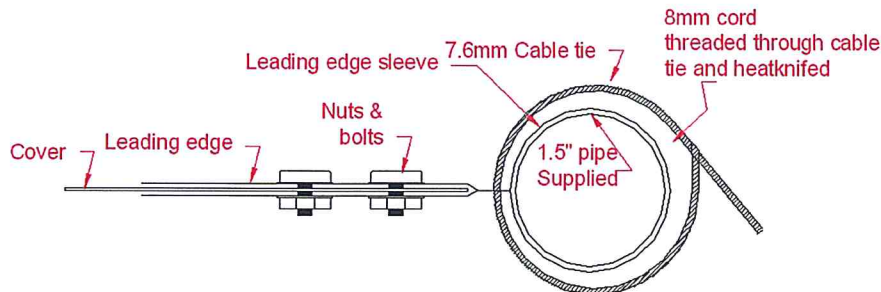

Fold one corner inside sleeve leaving a 45° angle, fix with a press fix connector as shown here.

Assemble 1½" pipe to cover width less 150mm (6") using pipe to pipe connectors, end caps and ABS adhesive.

Slide the assembled pipe into the sleeve and finish second end as the first.

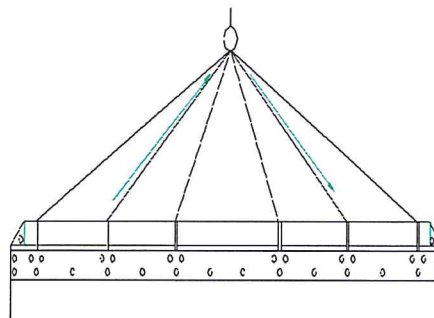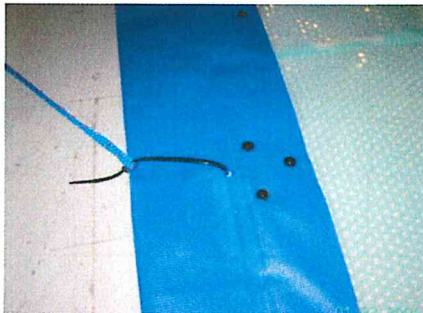

Lay the 8mm cord out so as to lace a continuous thread starting near one end of the leading edge to the central 'O' ring and then back to the cover symmetrically across the cover. Attach the cord using the cable ties through the pre-punched holes so that it can move to keep an even tension on all fixing points.

Use the 12mm cord attached to the 'O' ring via the dog clip to pull the cover along the water. Once the pool is covered, detach the tow cord and store safely.

NOTE: Adhesive cannot be supplied for Export orders.