

Steps for Replacing the Motor (General):

1. 1. Disconnect Power:

Unplug the cleaner from the power supply and then unplug the power supply from the wall outlet.

2. 2. Disassemble:

Rotate the screw holding the impeller cover and remove the cover.




Release the blue floating cable from the frame.

Open the top lids and remove the filters.



BWT Prowler and Cosmy Pool Cleaner

Unclip the six clips holding the Blue Trim and then remove the trim.

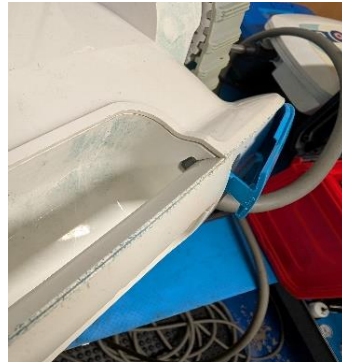


Undo the 6 clips holding the blue side cover.

Undo the screws holding the motor cover and frame and remove them.


Release and remove the screws for each cable holder.

Unscrew the power cable screw and unplug the cable, this can be tight and may have water inside please check.

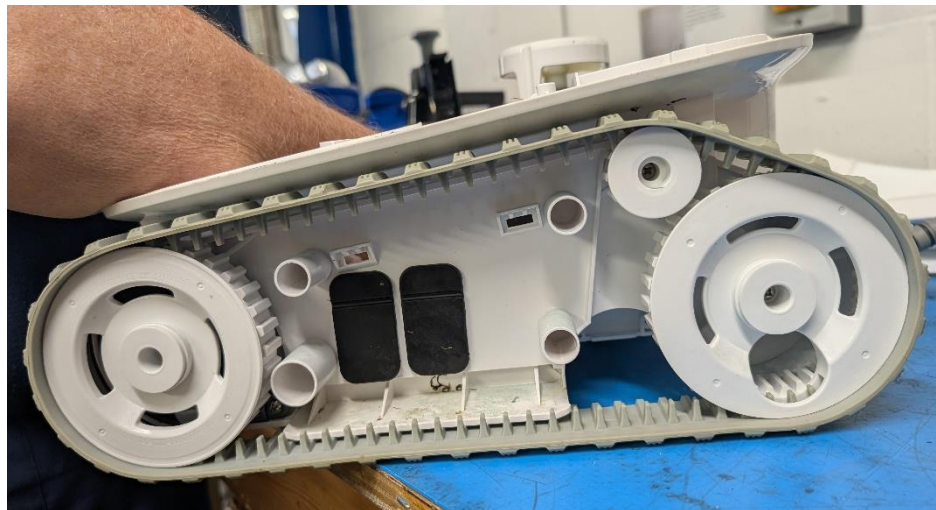

Undo the screws holding drive wheel and gears both sides. Then remove them and the track.

Remove the 3 screws holding the motor unit and then remove the motor.

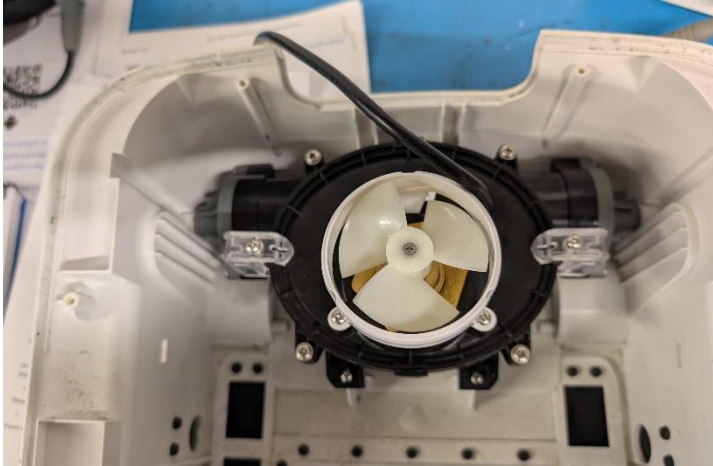

3. 3. Install New Motor:

Position the new motor and secure it with screws.

Reconnect the power cable and other components in reverse order of disassembly.

Reattach the frame, Covers, filters, and other parts.

4. 4. Test:

Submerge the cleaner in the pool and test its functionality.

Plug the power supply back in and turn it on. Must be submerged before testing.

5. Safety:

Always disconnect the power supply before working on the cleaner.


6. Proper Installation:

Ensure all components are correctly installed and secured to prevent issues.

7. Troubleshooting:

If the cleaner doesn't work after replacement, double-check all connections and consult the manual.

Prowler Cleaner

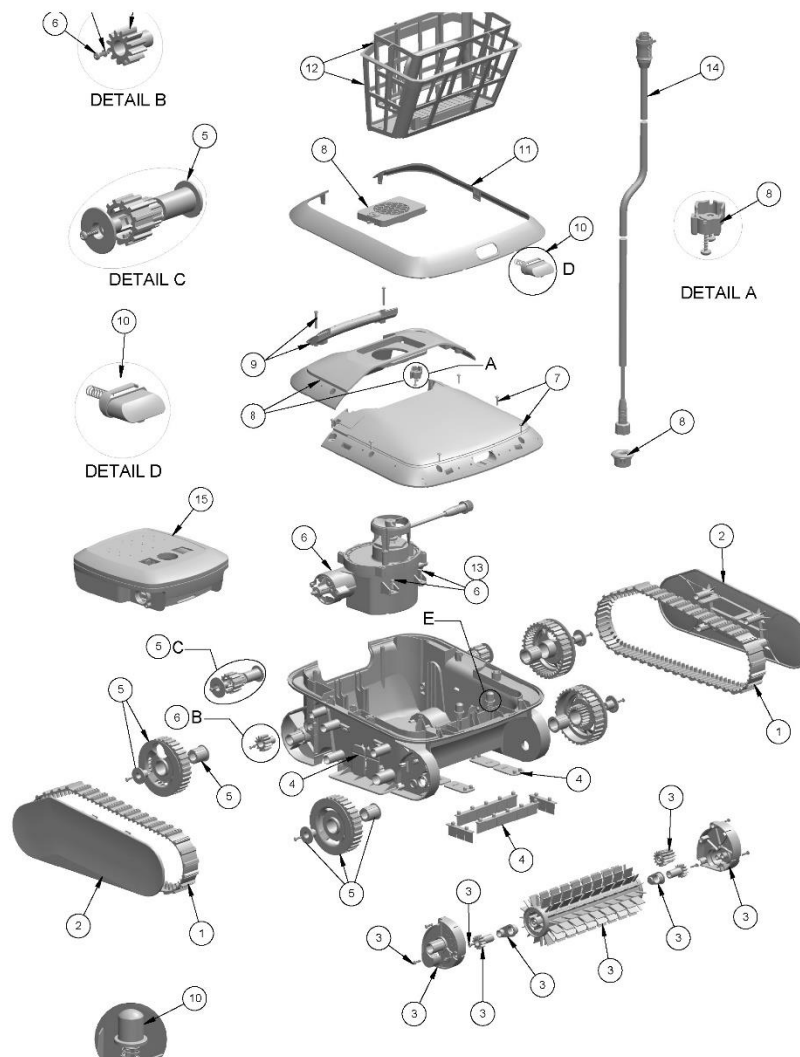

ITEM NO.	PRODUCT CODE	PART DESCRIPTION
1	RPROW001	Pentair Prowler Track Kit Set of 2 tracks
2	RPROW017	Pentair Prowler Side Panel Kit P20 Set of 2 plates
3	RPROW003	Pentair Prowler Front Brush Kit
4	RPROW004	Pentair Prowler Drain Flaps Kit
5	RPROW005	Pentair Prowler Drive System Kit
6	RPROW018	Pentair Prowler Motor Drive Kit P20/P25
7	RPROW007	Pentair Prowler Top Front Cover Kit
8	RPROW008	Pentair Prowler Back Cover Kit
9	RPROW019	Pentair Prowler Cover Handle Kit P20
10	RPROW010	Pentair Prowler Door Lift Knob Kit
11	RPROW020	Pentair Prowler Top Cover Frame P20
12	RPROW021	Pentair Prowler Filter Basket P20/P25
13	RPROW013	Pentair Prowler Screw-Pin Kit
16	RPROW016	Pentair Prowler Power Supply Cabel P-series
14	RPROW022	Pentair Prowler Communication Cable 16m P20
15	RPROW023	Pentair Prowler Power Supply P20/P25